

HYBRID OVEN ASSEMBLY INSTRUCTIONS

Unpacking Instructions

Step 1: Open the top of the carton.

Step 2: Remove the (**11760**) insulation stones (Qty. 12).



These are embedded into the top sections of the styrofoam side walls, packed in four locations with three stones each (six per side in total).



Step 3: Remove the top layer of styrofoam and lift off the outer carton sleeve.

Step 4: Carefully lift the main oven unit off the styrofoam base.

This will expose the (**11749**) pizza stones (Qty. 2), which are packed into the bottom foam layer, lying flat in the base of the box.

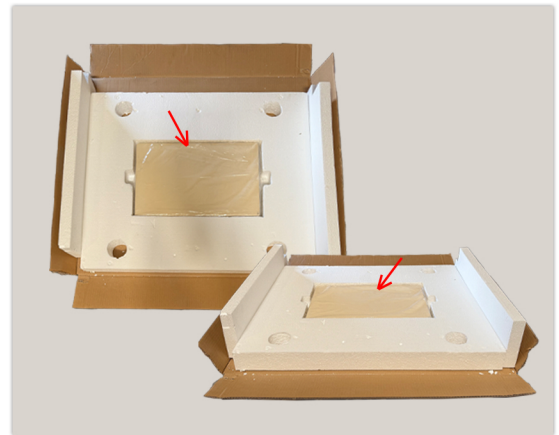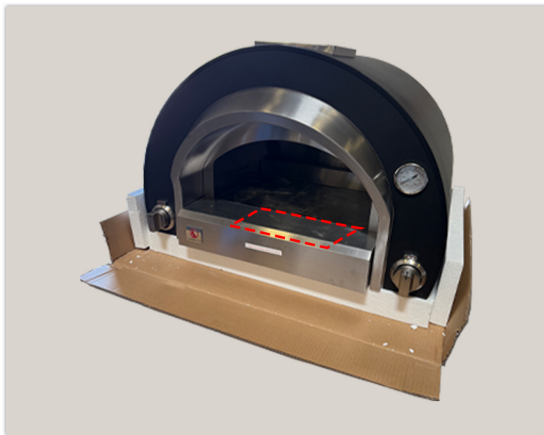

Step 5: Open the oven chamber and remove the loose internal parts:

- 11743** - Chimney Assembly
- 11742** - Exhaust Vent Assembly
- 11747** - Gas Burner Cover Back
- 11748** - Gas Burner Cover Right
- 11758** - Stainless Steel Wood Rack
- 11759** - Ash Tray
- 11774** - Door Handle with Screw
- 11776** - Door Assembly

Your pizza oven comes with several key components that must be assembled before use. Please review the following parts and instructions carefully. Refer to the included photos and diagrams for visual guidance.

11760 - Insulation Stones (Qty. 12)

Your unit includes 12 insulation stones. Only 10 are required for use; 2 are extras. These stones are designed to line the floor of the oven chamber in a specific pattern. Arrange the stones as shown to ensure even heat distribution and proper insulation.



11749 - Pizza Stones (Qty. 2)

Place the two large pizza stones side by side on the floor of the oven chamber. These form the cooking surface for your pizzas and should sit flush for an even baking experience.



11743 - Chimney Assembly (Qty. 1)

11742 - Exhaust Vent Assembly (Qty. 1)

Attach the chimney assembly to the designated port on the top of the oven.

Once secured, install the chimney vent assembly on top of the chimney. This allows for airflow control during cooking.



11743 - Chimney Assembly



11742 - Exhaust Vent Assembly

11747 - Gas Burner Cover Back (Qty. 1)

11748 - Gas Burner Cover Right (Qty. 1)


Your unit includes two burner covers, one for the rear burner and one for the right-side burner.

These are used **ONLY** during wood-burning operation to protect the gas burners from ash and debris.



11747 - Gas Burner Cover Back

11748 - Gas Burner Cover Right

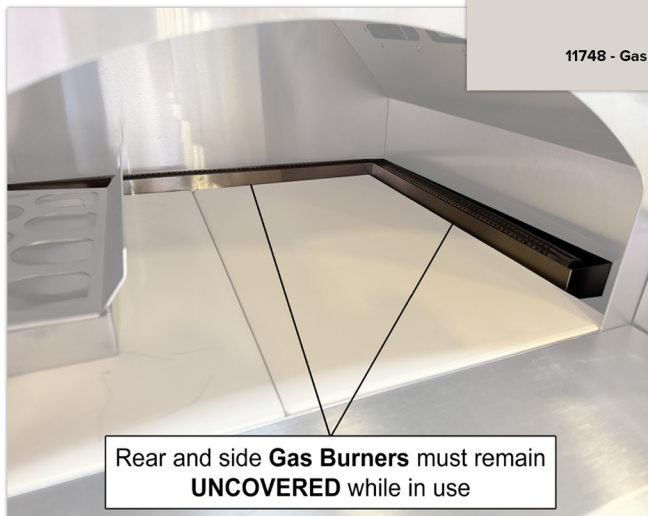

Rear and side **Gas Burners** must remain **UNCOVERED** while in use



Keep **Gas Burners** covered *only* when using the **Wood Burner**

REMOVE ALL COVERS BEFORE USING GAS BURNERS
to prevent dangerous gas buildup

⚠ WARNING: The burner covers are designed exclusively for use while operating the wood burner. Never operate the gas burners with the burner covers in place. Doing so is extremely dangerous and can result in gas accumulation beneath the covers. This trapped gas can ignite unexpectedly, leading to explosions, serious injury, or severe property damage.

11758 - Wood Rack

11759 - Ash Tray


Position the ash tray on the base of the wood-burning section, located on the left side of the interior of the oven near the wood burner. It will catch ash during wood-fired operation. Set the wood rack securely above the ash tray. This rack holds the firewood in place during use.



11776 - Door Assembly

11774 - Door Handle with Screw

Attach the door handle to the main door panel using the pre-installed screw. Insert the screw from the interior side of the door and tighten the handle on the exterior side until secure.

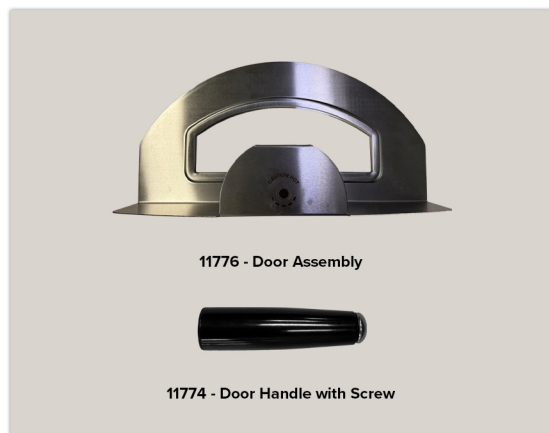

CAUTION: Always use the handle when opening or closing the door. The stainless steel surface can become extremely hot during and after use and should not be touched directly.