 

Design Specialties

MOUNTING INSTRUCTIONS FOR DESIGN SPECIALTIES HEARTH & HOME SERIES FIREPLACE DOORS

 
THESE FIREPLACE DOORS HAVE BEEN FULLY ASSEMBLED AND ADJUSTED PRIOR TO PACKAGING.

STANDARD HARDWARE



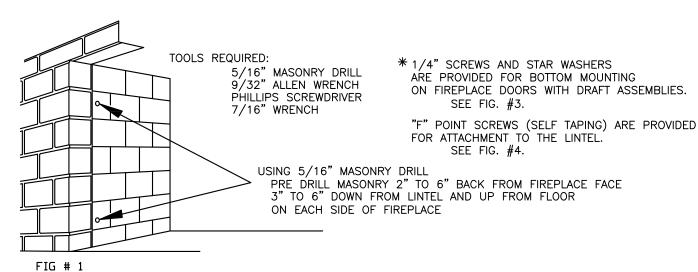


- 1. USING 5/16" MASONRY DRILL
 PRE DRILL MASONRY 2" TO 6" BACK FROM FIREPLACE FACE
 3" TO 6" DOWN FROM LINTEL AND UP FROM FLOOR
 ON EACH SIDE OF FIREPLACE
- 2. INSERT LEAD ANCHOR INTO DRILLED HOLES
- 3. PRE-BENDING MOUNTING STRAP EASES INSTALLATION SEE FIG#2
- 4. PLACE MOUNTING STRAPS, HEX SCREWS, AND WRENCH INSIDE OPENING WITHIN EASY REACH.
- 5. REMOVE PACKAGING FROM FIREPLACE DOOR.
- 6. PLACE DOOR AGAINST OPENING
- 7. INSERT CUP END OF STRAP INTO "C" SLOT AND BEND STRAP BACK AGAINST BRICK
- 8. INSTALL HEX SCREWS AND TIGHTEN USING A 7/16" WRENCH.
 DO ONE SIDE COMPLETE THEN DO THE OTHER. THIS MAY AVOID "RACKING" THE DOOR OUT OF ADJUSTMENT.




PRE-BENDING STRAP AS SHOWN EASES INSTALLATION


Design Specialties

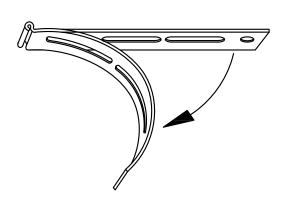


PRE-BENDING STRAP AS SHOWN EASES INSTALLATION

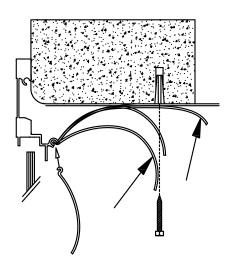



ADDITIONAL MOUNTING FEATURE ON CLASSIC SERIES FOR USE WHEN

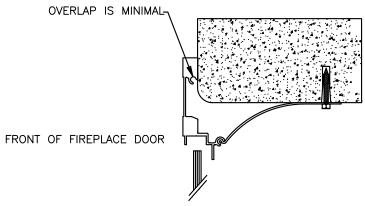

FRONT OF FIREPLACE DOOR

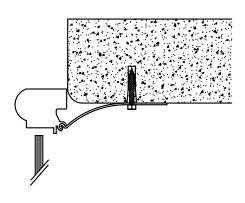

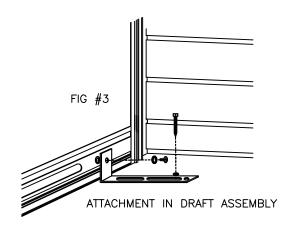

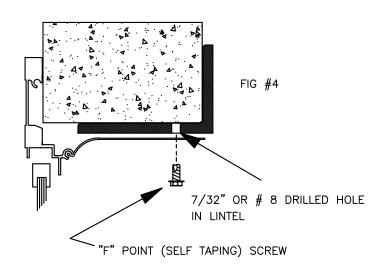

DOOR ADJUSTMENTS

OUR FIREPLACE DOORS ARE FULLY ASSEMBLED AND ADJUSTED PRIOR TO LEAVING THE FACTORY. HOWEVER, THE GLASS DOORS MAY HAVE SHIFTED DURING SHIPMENT, REQUIRING AN ADJUSTMENT TO GET THE GLASS DOORS TO HANG PROPERLY.


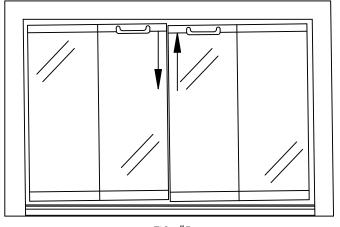


FIG #5

9. AFTER INSTALLING THE FIREPLACE DOOR, CHECK HOW DOORS OPERATE. CHECK THE GAPS AT THE CENTER AND BETWEEN THE GLASSDOORS AND THE FRAME. IF THE GAPS ARE THE SAME BUT THE TOPS ARE NOT IN ALIGNMENT, IT MAY BE NECESSARY TO MOVE THE BOTTOM FRAME OVER TO BRING THE TOPS OF THE GLASS DOORS INTO ALIGNMENT. LOOSEN THE MOUNTING STRAPS AND MOVE THE BOTTOM OVER SLIGHTLY UNTIL THE GLASS DOORS ARE IN ALIGNMENT. RETIGHTEN THE MOUNTING STRAP. SEE FIG. #5.

10. IF ONE DOOR STICKS OUT FROM THE OTHER ONE, YOU WILL NEED TO MOVE ONE OF THE CORNERS OF THE FRAME OUT SLIGHTLY. ON THE SIDE THAT THE GLASS DOORS ARE IN FROM THE OTHER DOOR, LOOSEN THE NEAREST MOUNTING STRAP AND PULL THE DOOR FORWARD UNTIL THE DOORS ARE IN ALIGNMENT. RETIGHTEN MOUNTING STRAP. SEE FIG #6.

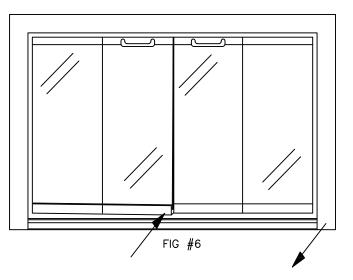

11. IF THE GAP BETWEEN THE GLASS AT THE CENTER IS DIFFERENT TOP TO BOTTOM, YOU WILL NEED TO ADJUST THE HINGES. THE GAP SHOULD BE APROXIMATELY 1/16" BETWEEN THE GLASS DOORS AT THE CENTER (1/8" FOR DOORS FOR FACTORY BUILT FIREPLACES). DETERMINE WHICH HINGE IS OUT OF ALIGNMENT. USING A PHILLIPS SCREWDRIVER, LOOSEN THE SCREW THAT HOLDS THE HINGE TO THE FRAME, AND SLIDE THE HINGE OVER SLIGHTLY AND RETIGHTEN. CHECK THE DOOR OPERATION, AND REPEAT THIS PROCEDURE IF NECESSARY. SEE FIG#7.



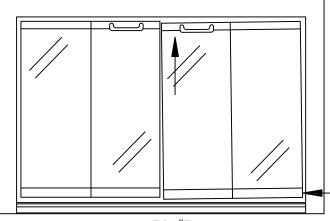


FIG #7

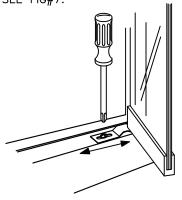

DESIGN SPECIALTIES

DESIGN SPECIALTIES MESH CURTAIN INSTALLATION EXPRESSION SERIES AND HEARTH & HOME SERIES FIREPLACE DOORS

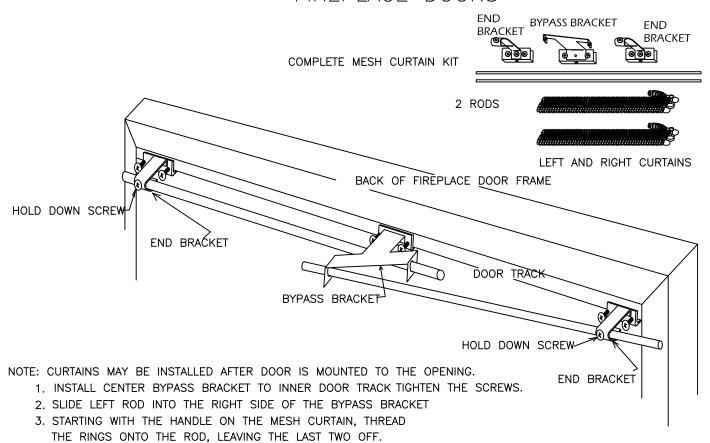

- 4. SLIP THE END BRACKET ONTO ROD AND POSITION THE END BRACKET
 TO THE INNER DOOR TRACK AT THE OUTER END OF THE TRACK.TIGHTEN THE SCREWS.
- 5. SLIP THE REMAINING RINGS ONTO THE ROD ON THE OUTSIDE OF THE END BRACKET.

