
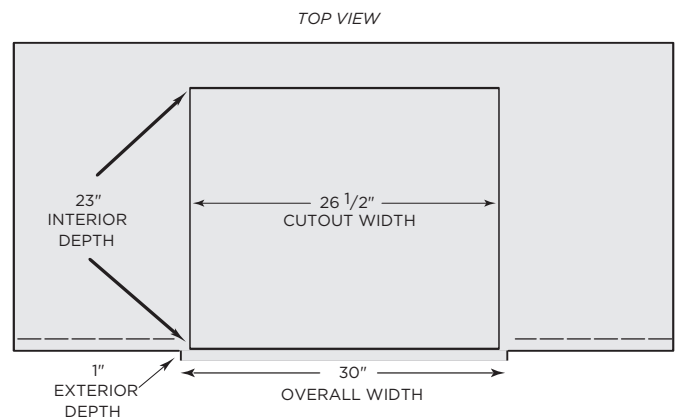
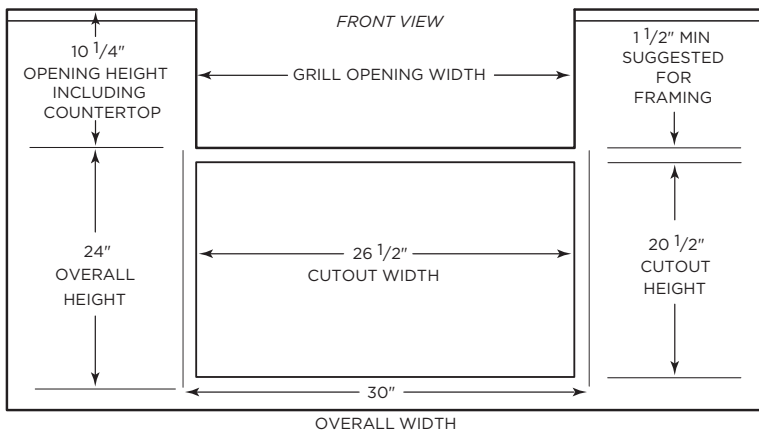
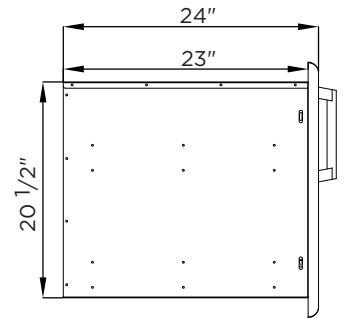
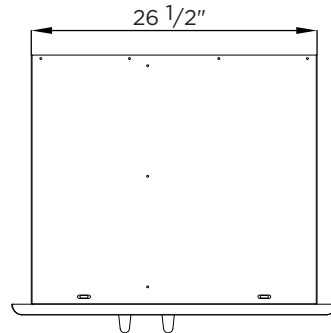
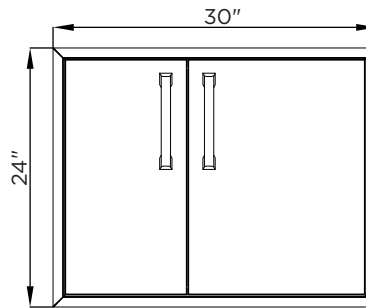


# C3-DPC31 INSTALL GUIDE

## DIMENSIONAL RENDERINGS

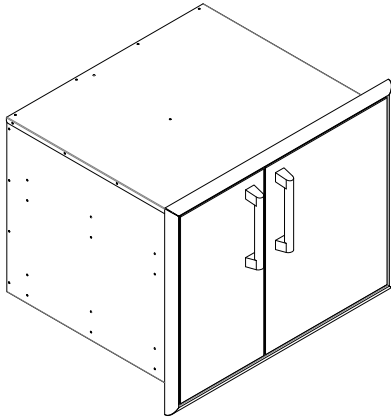

| Overall Product Dimensions |        |       |       |
|----------------------------|--------|-------|-------|
| Model No.                  | Height | Width | Depth |
| C3DPC31                    | 24"    | 30"   | 24"   |

| Cutout Dimensions for Island |         |         |       |
|------------------------------|---------|---------|-------|
| Model No.                    | Height  | Width   | Depth |
| C3DPC31                      | 20 1/2" | 26 1/2" | 23"   |

### Install Notes:

- ✓ 2 anchor points are located on each side of the doors interior frame (top, bottom, left and right)
- ✓ Due to wide variance of possible building materials, anchors are not included
- ✓ When inserting your anchors be sure to use a framing square to ensure the door is not pulled out of square
- ✓ Additional framing and/or support underneath the rear (hanging portion) of the cabinet is recommended
- ✓ These specs are accurate but we always suggest having the product physically on site to ensure full understanding of how this product will coordinate with your build