

# How to use TuyaSmart to control the fireplace

## 1. Install TuyaSmart life.

there are 2 ways to install TuyaSmart:

- ① Search for “ TuyaSmart life” in the APP store on your phone, download and install it.
- ② Scan the qr code below with your mobile phone.



## 2. Create family

Follow the prompts to create an account. In this step, you can set family name, family location and which room have smart devices. Press the “ Completed ” in the upper right corner, then your family created successfully.

## 3. Add device


First confirm which room you want to add the device to, then click in the following order to add the device: Add Manually—— Small Home Appliances ——Heater,(power on the heater and press the flame button for 6 seconds,the timer button rapidly blinks)——Confirm indicator rapidly blink——Confirm.

Wait a minute for the connection to succeed and enter the fireplace control screen.

### NOTE:

**When connecting wifi, you need to turn on the wifi and location of the mobile phone,try to keep the phone close to the fireplace.**

**Connect and disconnect the wifi:** press the flame button till the time button light rapidly blinks. At this time, press any button except the timerbutton to exit wifi connection mode.

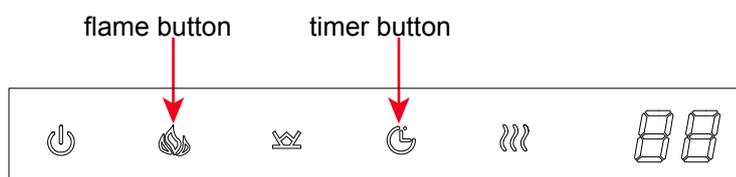

## 4. Operation

The screenshot shows the Amantii mobile application interface. At the top, there is a back arrow, the brand name 'Amantii', and an edit icon. The main control area features a fireplace icon and a large 'OFF' to 'ON' toggle switch. Below this are two temperature control sections: 'SET' for the fireplace (15°C/59°F) and 'temperature\_house' for the room (15°C/59°F). Further down are controls for 'Sound' (toggle), 'Heat' (OFF with a right arrow), 'Ember\_Bed' (toggle), and 'Flame' (toggle). Each of these four sections has a corresponding state indicator below it: three 'Ember\_Bed' icons, three 'Flame' icons, and a 'speed' indicator with 'AD' and '1' options. At the bottom, there is a 'Turn\_OFF' button with a timer set to '0.0H', a 'Warning' indicator, and a status display showing 'none'. A legend at the bottom right explains the status codes: 0 for normal operation, 1 for overheating, 2 for defective NTC, and 3 for heater failure.

On & Off – Single press to turn fireplace on and off.

Room Temperature Display . This displays the desired room temperature .

Temperature Control. Single press to increase or decrease the temperature

On & Off Slide Slide to turn sound on and off .

Heat High / Heat Low Single press to adjust the temperature

On & Off Slide Slide to turn ember bed on and off

There are 8 states for ember bed light.

On & Off Slide Slide to turn flame light on and off

There are 6 states for flame light.

There are 12 states for moodlight.

There are 3 speeds for flame light

Set up / Programmable Timer Button – Used to navigate timed options

0 Normal operation of fireplace  
 1 The heater is overheating, Call after-sales service  
 2 NTC is defective, Call after-sales service  
 3 The heater is not working, Call after-sales service

## How to share devices

Click the edit icon (  ) in the upper right corner, then enter the selection screen, you can select which fireplace you want to share. click “Share Device”——“Add Sharing”——Enter the phone number or email address of the person you want to share it with. Click the “ Completed ” in the upper right corner, then the fireplace was successfully Shared.