

**ATTENTION:** Installer please leave these Instructions with the homeowner.

# Free Standing Screen

## Installation & Operating Instructions



**Woodland Direct**  
2025 Taylor Rd  
Auburn Hills, MI 48326  
(800) 919 - 1904  
[www.woodlanddirect.com](http://www.woodlanddirect.com)

# Installation Instructions

## PARTS INCLUDED FOR INSTALLATION:


1 ea. Hardware Kit with brackets and fasteners	2 ea. Back Foot
2 ea. Front Foot	4 ea. Screws

### If you have questions:

Please contact Woodland Direct before proceeding with installation.


## ASSEMBLY:

- Attach the front feet using 2 screws (provided) **(Figure 1)**
- Attach the back feet using 2 screws (provided) **(Figure 2)**
- If your screen has operable doors, please see the next section below

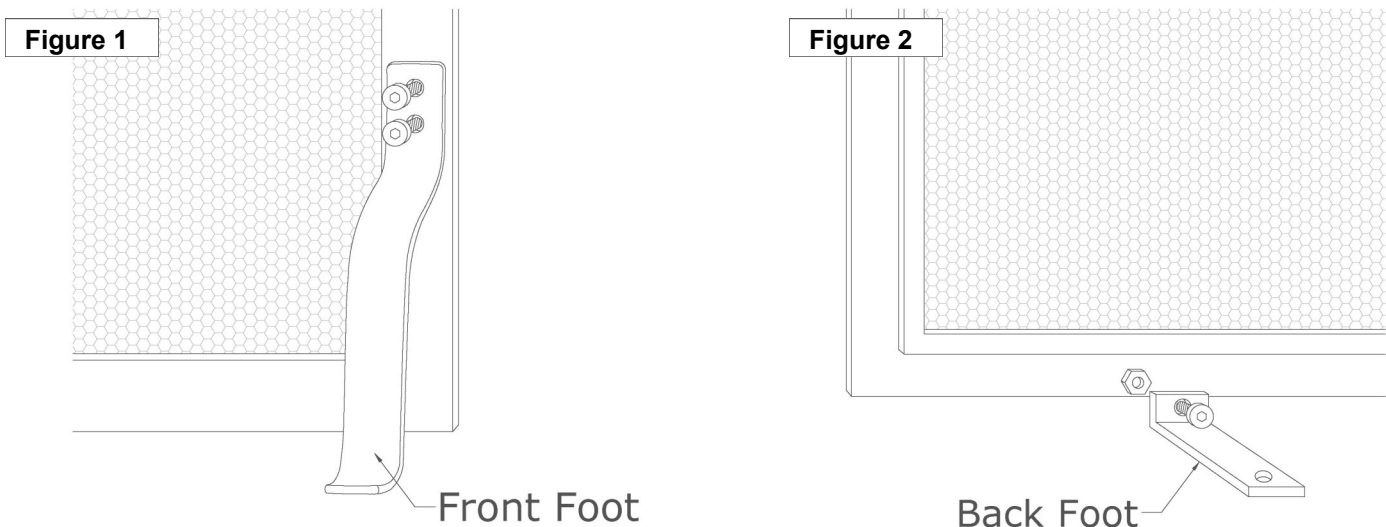

### Installation of Freestanding Screen with Operable Doors *(if applicable)*

- **WARNING!** Screen can tip forwards when doors are opened, if not fastened using one of the methods below:
- Remove the mesh doors from the Main Frame to make the enclosure lighter for installation and to protect the finish.
- **Method 1. (masonry application only)** Attach the top of the screen to the lintel using the provided Lintel Clamps. Assemble two Lintel Clamps by threading an adjusting nut, a flat washer, and a Lintel Bracket onto the 6" long threaded bolts. **(Figure 3)** Thread the Lintel Clamp bolts into the mounting nuts welded onto the back of the Fireplace Enclosure. Don't over-tighten. **(Figure 3)** Rotate the Lintel Clamps up toward the top of the fireplace to grip the fireplace lintel and snug down the adjusting nuts..
- **Method 2.** Using the appropriate screws/bolts *(not provided)* attach the rear screen feet securely to the hearth or firebox.
- Re-Install the Mesh Doors.

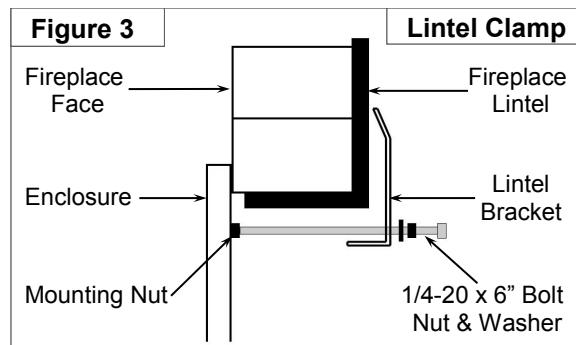

# Operating Instructions

---

**CAUTION:** Do not light a fire until you read and completely understand the Safeguards that follow. If you have any questions or concerns, please contact Woodland Direct before proceeding.

## **GENERAL SAFEGUARDS:**

- Excessive heat can cause damage to the Fireplace Screen. A very hot wood or gas fire, hot coals, embers, ashes, and/or logs coming in contact with the back of the enclosure can cause discoloration or more serious damage to the finish. This type of damage, caused by over-heating, is considered abuse and is not covered under warranty.
- Do not burn trash, construction materials, pressure treated lumber and/or railroad ties in your fireplace. The intense heat that these types of materials can produce can damage your Fireplace Screen and the fumes from burning these types of materials can create a serious health hazard. Dry, seasoned hardwood is the recommended fuel.

**CAUTION:** Woodland Direct uses very high quality tempered glass (*when applicable*) but tempered glass is breakable like any glass. The most important precaution is to keep the glass doors open when the fire is burning. The tempering process makes the glass stronger and more resistant to heat and impact but not impervious. Avoid striking the glass with logs or fireplace tools. If tempered glass does fail it breaks into small pieces. Glass pieces may fly about the area. Never sit, or allow children or anyone else to sit, close to the glass when the fire is hot. Use a protective hearth rug or other suitable non-flammable protection in front of the fireplace to protect wood floors and/or synthetic carpets. In the event that the glass should break, the resulting small pieces could burn skin or damage flooring.

**⚠ WARNING:** This product can expose you to chemicals including Carbon Black, which is known to the state of California to cause cancer. *For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)*

## **A WORD ABOUT ENERGY:**

Keep your glass doors closed when the fire is out.

Fireplaces are designed to draw air and smoke up the chimney. Even when the fire is cold the warm air created by your heating system is going up the flue. It is equivalent to having a one square foot hole in your roof. Closing the fireplace damper helps, but most dampers do not close tightly. Closing the glass doors is like closing your storm door.

If you have vented gas logs installed the fireplace damper is fixed open at all times. Closing the glass doors in your fireplace enclosure will close off 99% of the fireplace opening and help stop the loss of heated room air up the chimney.

In some cases the chimney flow reverses and cold air is pulled down the chimney. This is quite common in well insulated homes. Turning on the kitchen vent hood or a clothes dryer pulls cold air in through the fireplace. Glass doors help stop the cold drafts. For more serious down-drafting Woodland Direct makes Air-Seal doors that are gasketed for a better seal.

So keep those glass doors closed any time you are not enjoying a warm fire on your hearth.

### **Five Year Limited Warranty for Masonry Fireplace Enclosures**

Woodland Direct warrants its Masonry Fireplace Enclosure to be free from defects in metal materials and/or workmanship, under normal use and conditions of service, for a period of five (5) years, subject to the limitations outlined below. Glass is warranted to be free from defect in materials, under normal use and conditions of service, for a period of one (1) year, subject to the limitations outlined below. This warranty is non-transferable and is extended exclusively for the benefit of the original purchaser beginning on the original date of retail sale. Woodland Direct will, at its option, repair or replace any part that fails due to a defect in materials or workmanship at no charge (exclusive of freight) subject to the limitations of this warranty.

This warranty covers repair or replacement of parts only and applies exclusively to products purchased for consumer use. This warranty does not cover damage caused by transportation and/or handling or which results from alteration, accident, misuse, abuse, or improper installation. It also makes no warranty as to maximum temperature and stresses which may cause discoloration of metal finishes, distortion of metal parts, and/or glass breakage.

This warranty constitutes the entire warranty with respect to Woodland Direct and/or its products. Woodland Direct shall not be liable for consequential or indirect damages which are caused by defects in its product, by its repair or replacement. Woodland Direct makes no other warranty, expressed or implied, including any warranty of merchantability, or warranty of fitness for a particular purpose. Implied warranties of merchantability and fitness for a particular purpose which may arise under state law are also limited in duration to five years from the original purchase of this product. Some states do not allow such limitations, in which case this limitation may not apply. The consumer may have other rights that vary from state to state.

If, during the warranty period, a product covered under this warranty proves to be defective in material or workmanship, a claim for warranty service should be made through Woodland Direct. Proof of purchase will be required. Woodland Direct will procure replacement parts and/or contact Stoll Industries if additional service is deemed necessary.

If you have questions about your product or the terms of your warranty please contact:  
Woodland Direct ~ 2025 Taylor Rd ~ Auburn Hills, MI 48326

When applying for warranty replacement, or ordering replacement parts, always specify the type of product, the color, the height, and width. Describe the damaged or defective part in detail. Please provide digital pictures if possible.