


How to Size:

The Original Grate Heater can only be used in masonry fireplaces with a minimum front opening of 29 ½". Measure the fireplace width across the back and depth from the front of the face wall to the back wall of the fireplace to determine which model best suits your needs. Grate Heater dimensions need only be less than the fireplace dimensions.

All units come with a front grille 1 3/8" high and adjustable from 29 ¼" – 51" wide. If doors are to be used, they must sit on top of the front bar of the Grate Heater, which will reduce the height of the opening by 1 3/8". You may cut the included extender bars to the width of the door if you choose for a more finished look.

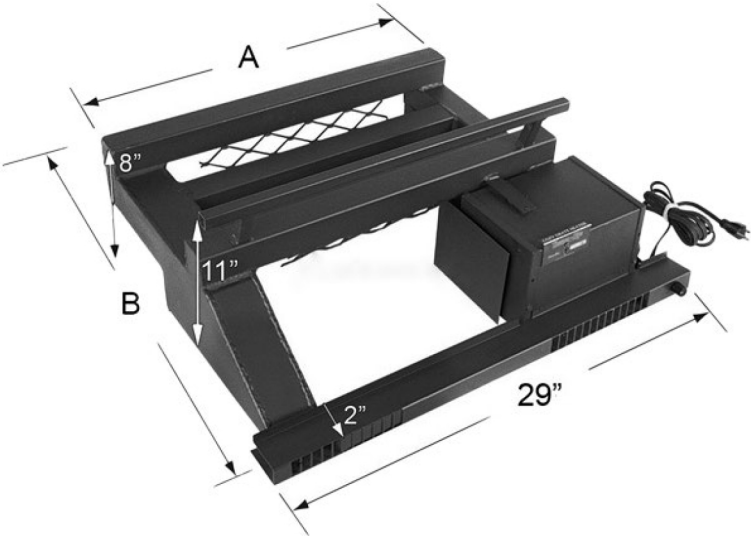

| Model | A | B | Weight |
|--------|----|----|--------|
| | | | |
| GH2220 | 22 | 20 | 58 |
| GH2422 | 24 | 22 | 60 |