


INSTALLATION INSTRUCTIONS FIREPLACE INSERT KITS


FIREPLACE INSERT CUSTOM SURROUND KITS

FOR USE WITH VF(L,P)(20,28)IN SERIES FIREPLACE INSERTS (SEE PAGES 2 TO 5)

FOR USE WITH VF(L,P)C(20,28)IN SERIES FIREPLACE INSERTS (SEE PAGES 2 AND 7)

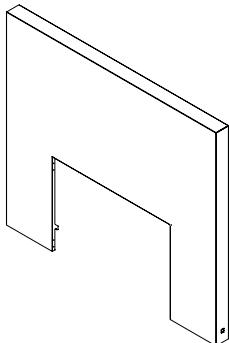


3-SIDED SURROUND

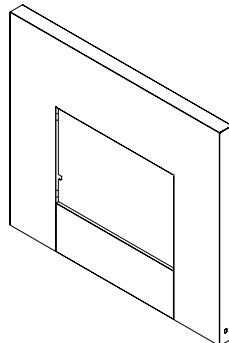


4-SIDED SURROUND

FOR USE WITH DVC(20,26,28)IN AND DVCT(30,35)CBN SERIES FIREPLACE INSERTS (SEE PAGE 6)


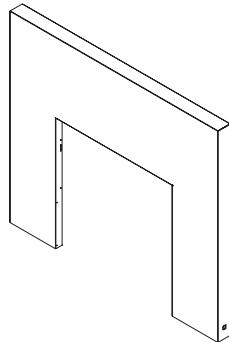


3-SIDED SURROUND

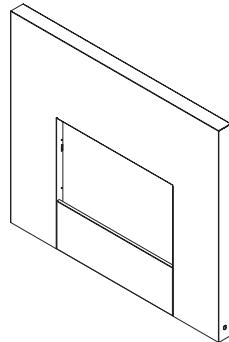

4-SIDED SURROUND

FOR USE WITH DVCP34BN SERIES FIREPLACE INSERTS (SEE PAGE 5)

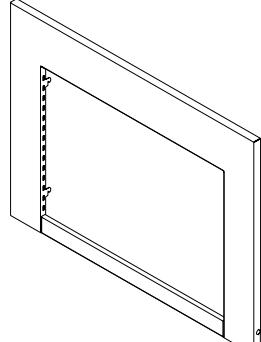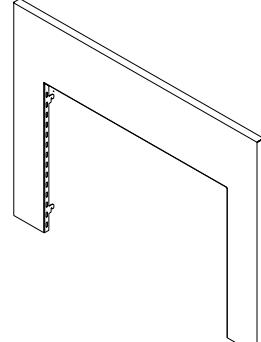

CAUTION: Sharp Edges

NOTE: These instructions apply to VF(L,P)(20,28)IN, VF(L,P)C(20,28)IN, DVC(20,26,28)IN, DVCP34BN and DVCT(30,35)CBN - Fireplace Inserts when installing custom surrounds.

NOTE: The Fireplace Insert must be installed into the fireplace cavity with all venting, gas and electrical connections completed before installing the Custom Surround.

NOTE: If the Fireplace Insert includes standard louvers, remove them prior to installation of the Custom Surround.

VF(L,P)C(20,28)IN SERIES FIREPLACE INSERTS

1. Place custom surround against wall and fireplace as shown in **Figure 1**.

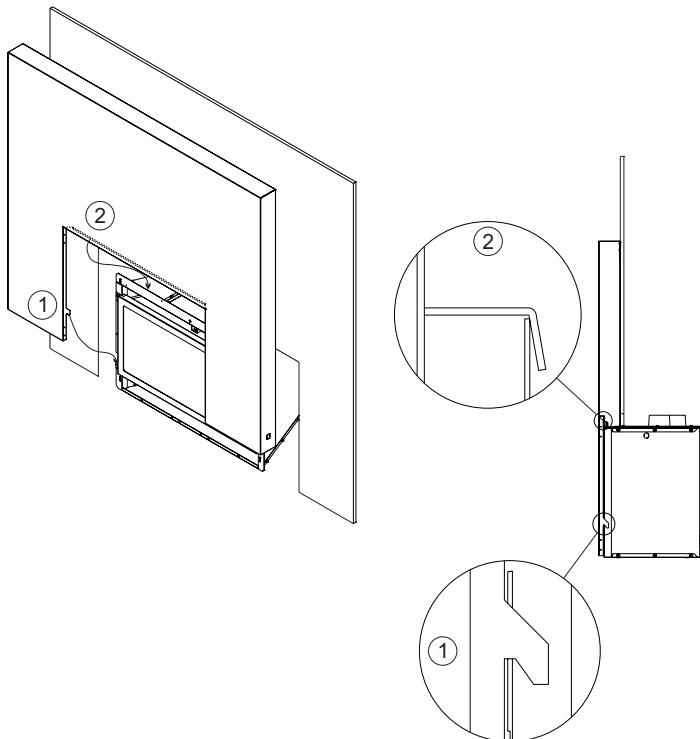


Figure 1

3. Measure 2-3/4" down from the mark made in step 2 and make a new mark. **See Figure 3.**

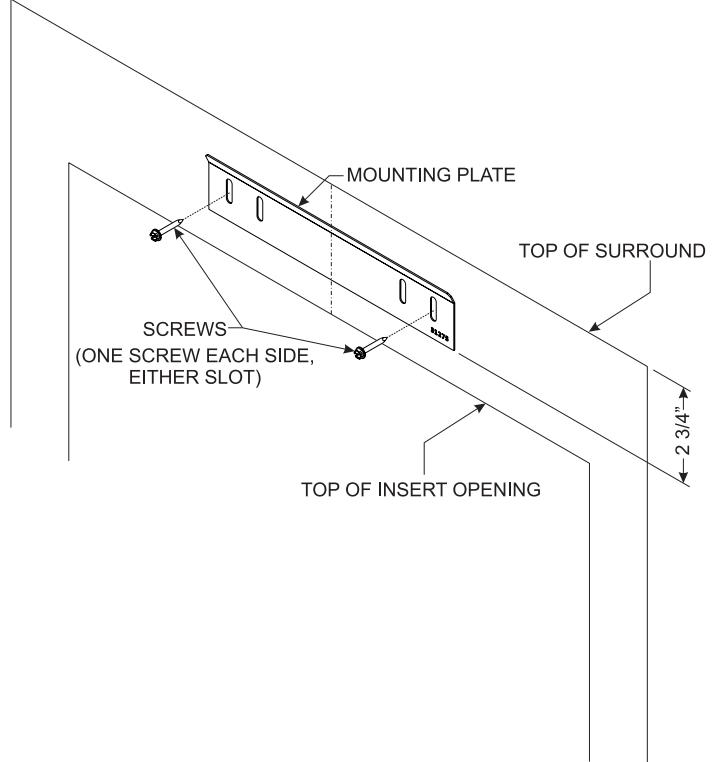


Figure 3

2. Lightly mark the wall on the at the center. Remove the surround. **See Figure 2.**

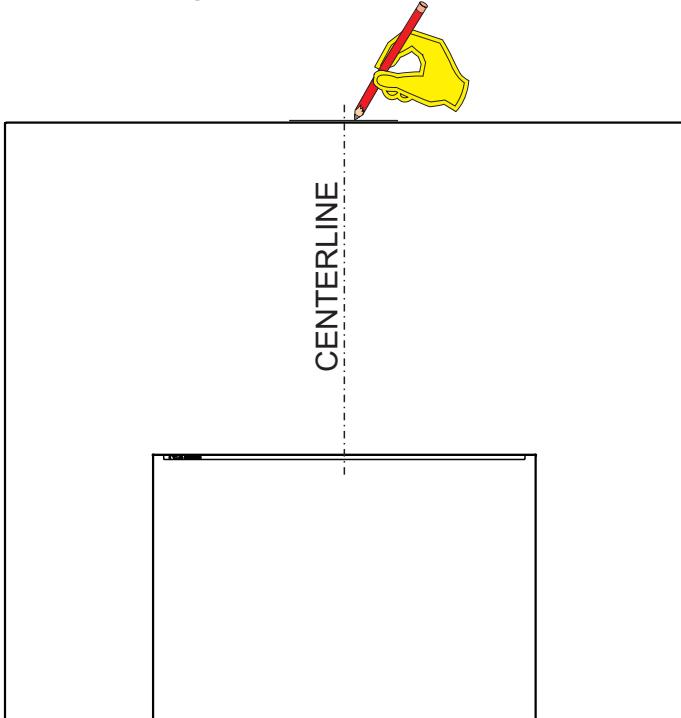


Figure 2

4. Line up bottom of mounting plate with mark made in Step 3. Install the mounting plate to the wall with the two screws provided. Ensure the mounting plate is level. One screw must be placed on each side of the mounting plate, but either slot may be used.

- 4a. Install a Door or Front Kit. A Door or Front Kit is required on DVL(25,33)IN models and is optional on DV(25,33,35)IN Models. See installation instructions included with the door or front kit.

VF(L,P)C(20,28)IN SERIES FIREPLACE INSERTS

5. Install the Surround by placing the top surround flange over the mounting bracket and the middle surround flange over the top flange of the insert. Center the surround left to right, then swing the legs of the surround inward. Lift each surround leg slightly so that the lower retaining hooks engage the notched out areas in the insert side flanges. The top flange of the surround will hook behind the top flange of the mounting plate.
6. The Surround kit includes a bottom panel that replaces a standard lower louver assembly. If an operable door kit is to be installed, attach the magnet door catch to the bottom panel with two #6 x 3/8" screws. **See Figure 5.**

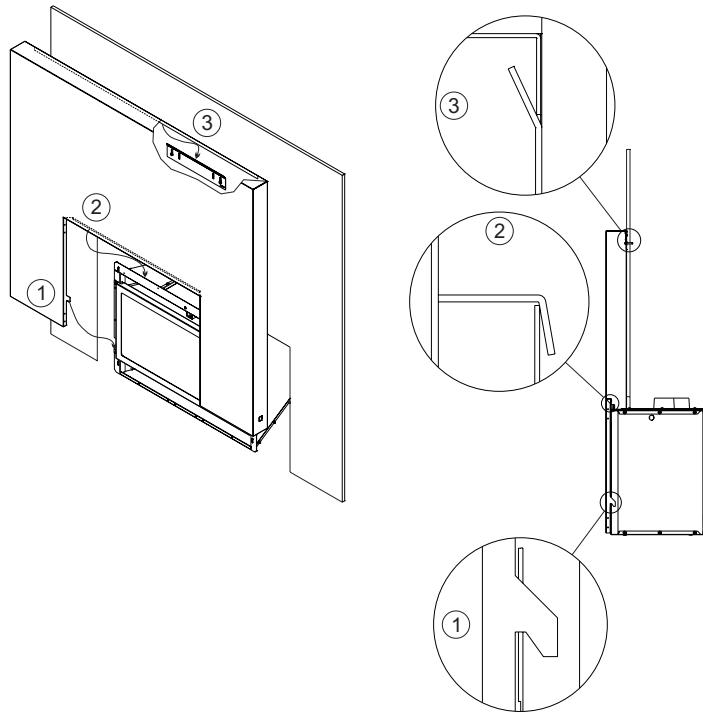


Figure 4

NOTE: 3-SIDED CUSTOM SURROUND SHOWN


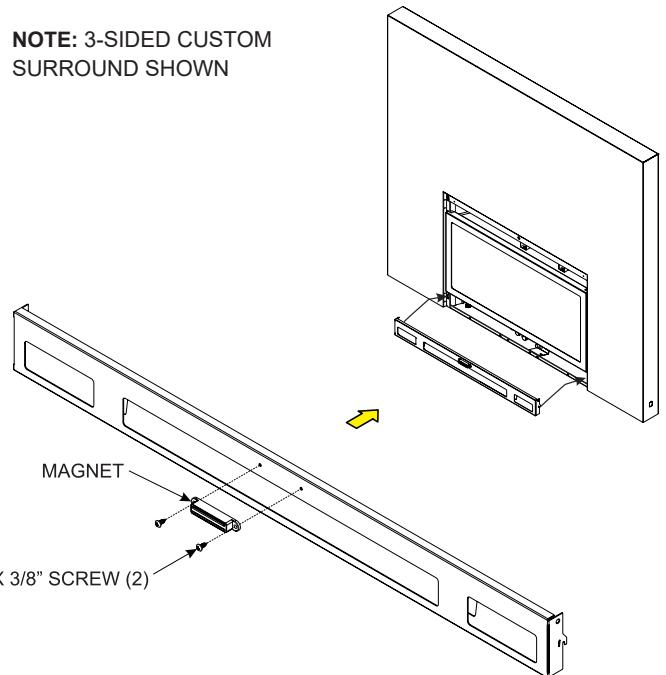



Figure 5

VF(L,P)C(20,28)IN SERIES FIREPLACE INSERTS


HARDWARE PACKAGE (FOR USE WITH DV(L)(25,33,35)IN AND VF(L,P)C(20,28)IN)



PLASTIC TOGGLE ANCHOR




SCREW




SCREW, MASONRY

DESCRIPTION	PART NUMBER	QUANTITY SUPPLIED
Plastic Toggle Anchor	R1996	2
Screw	R1134	2
Screw, Masonry	R2870	2
Wall Mounting Bracket	31275	1
Screw, Magnet	B101012	2
Magnet	R11280	1

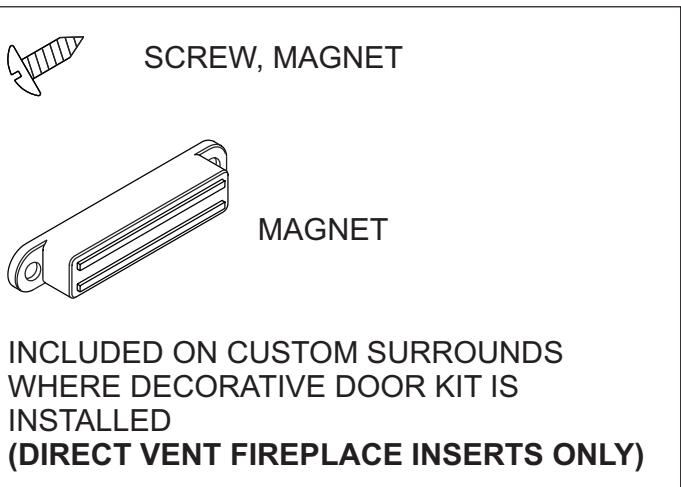


SCREW, MAGNET

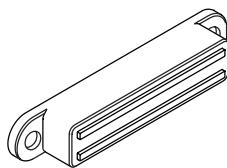

MAGNET

INCLUDED ON CUSTOM SURROUNDS
WHERE DECORATIVE DOOR KIT IS
INSTALLED
(DIRECT VENT FIREPLACE INSERTS ONLY)

WALL MOUNTING BRACKET

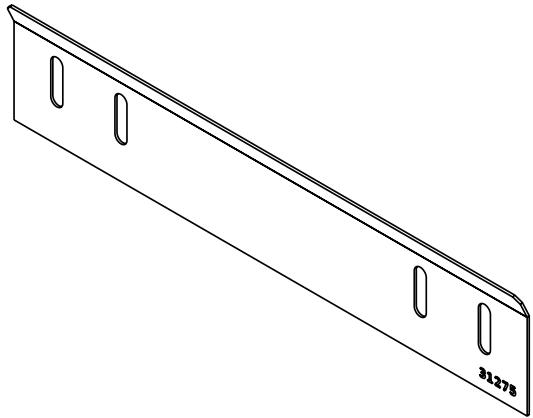

DVCP34BN SERIES FIREPLACE INSERTS

INSTALLATION OF CUSTOM SURROUND

1. Slide the side hooks onto the four pegs (two each side) on the firebox.

Custom Surround Installation without Optional Safety Screen Barrier

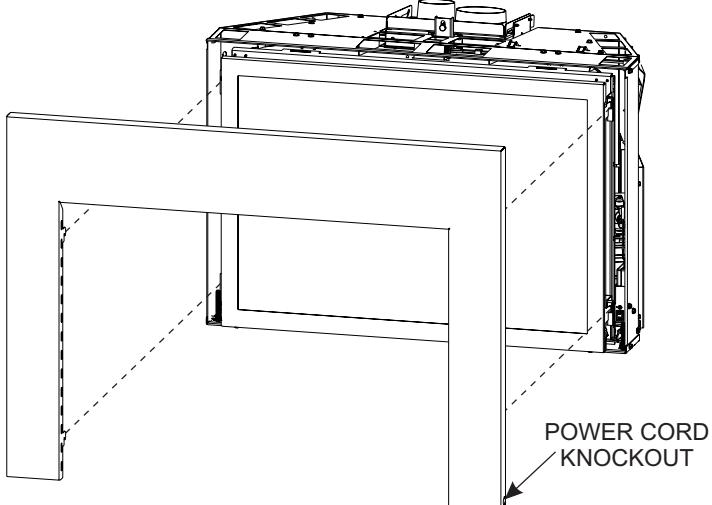


Figure 6
3 SIDED SHOWN

DVC(20,26,28)IN SERIES FIREPLACE INSERTS

DVC(20,26,28)IN AND DVCT(30,35)CBN INSERTS

Secure the custom surround to the fireplace insert flanges with four (4) #8 x 1/2" truss head screws

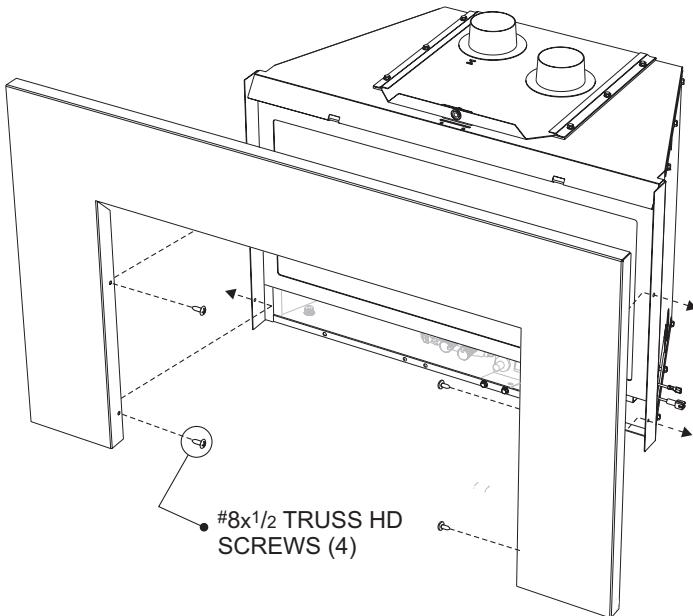


Figure 7

DVCT(30,35)CBN INSERT

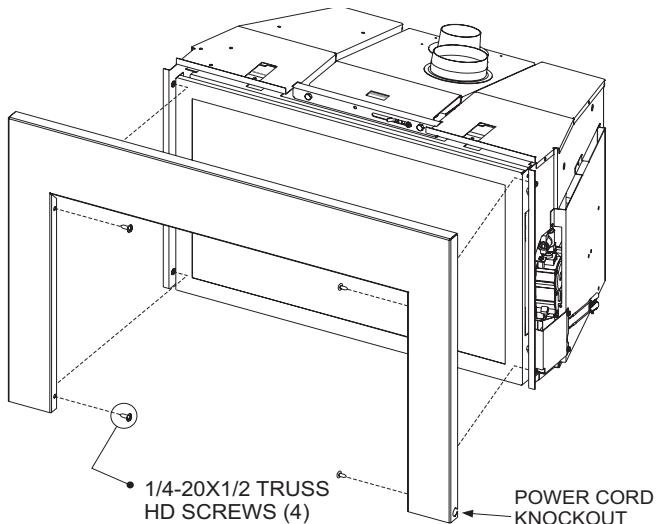


Figure 8

TOOLS REQUIRED:

- Phillips Tip Screwdriver

NOTICE: Installation and repair must be done by a qualified service person.

Attention: Do not handle the surround with your bare hands. Wear gloves to prevent injury from sharp edges.

PREPARATION


- Unpack the components and check for damaged or missing parts.

INSTALLATION

- Install fireplace insert prior to installing the Surround. Remove barrier screen and glass door. Refer to the instructions provided with the fireplace insert.
- Remove the knockout at the lower right corner of the surround to route the power cord if desired.
- Slide the side flanges of the surround to the inside of the mating flanges of the insert.
- Align the mating holes and install four 1/4 - 20 X 1/2 inch Phillips Pan Head screws to secure. **See Figure 8.**
- Replace the Glass Door Assembly.
- Install the Barrier screen assembly.

VFLC, VFPC(20,28)IN FIREPLACE INSERTS

INSTRUCTIONS MUST BE LEFT WITH THE OWNER FOR FUTURE REFERENCE AFTER INSTALLATION.



#8-18 x 1/2" PHILLIPS TRUSS HEAD SCREW

Tools Required: Phillips Screw Driver

NOTICE: Installation and repair must be done by a qualified service person.

Attention: Do not handle the surround with your bare hands. Wear gloves to prevent injury from sharp edges.

Preparation

1. Unpack the components and check for damaged or missing parts.
2. Remove the barrier screen from the fireplace insert. Refer to the instructions provided with the fireplace insert.

Installation

1. Place the Insert on the fireplace hearth prior to installing the Surround.
2. Attach the lip to the top inside flange of the surround.
3. Align the mating holes and install three #8 X 1/2" Philips Truss Head screws to secure. **See Figure 9.**
4. Install the On/Off switch in the outer edge of the surround panel at this time, if desired. Refer to the instructions supplied with the VFLC or VFPC Series Insert for switch installation.
5. Install the surround to the insert by aligning the four hooks on the surround with four rectangular cutouts in the face flanges of the insert .
6. Slide the Insert with the attached Surround, into the fireplace cavity.
7. Install the Barrier Screen Assembly.

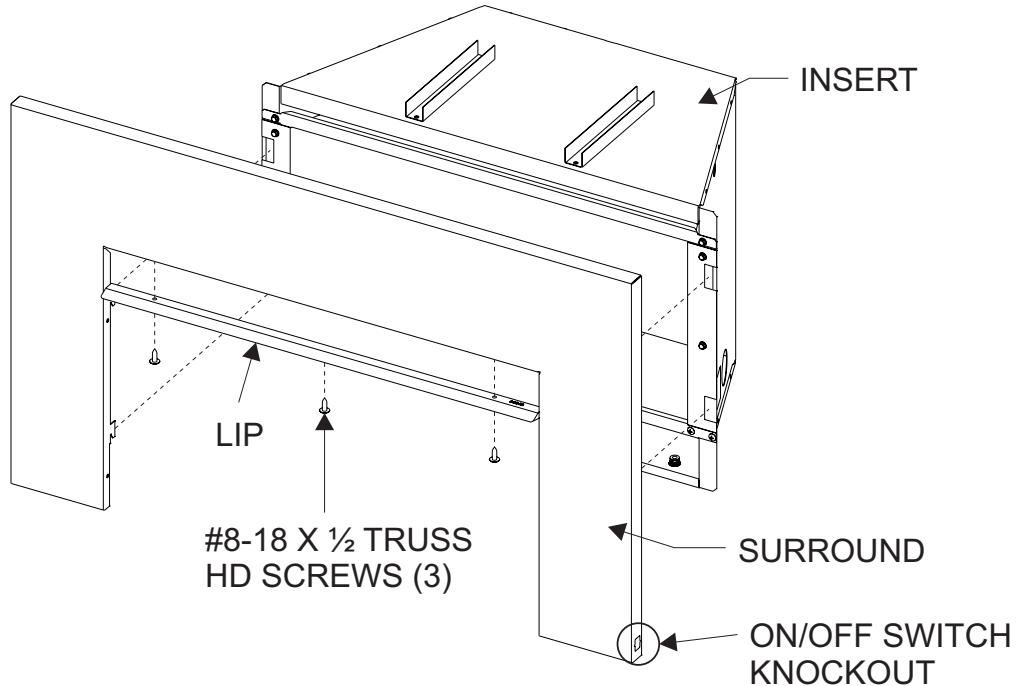


Figure 9



SINCE 1932

www.empirecomfort.com

**Empire Comfort Systems Inc.
Belleville, IL**

If you have a general question about our products, please e-mail us at info@empirecomfort.com.

If you have a service or repair question, please contact your dealer.