


Installation Instructions for Hanger rod & Screen System

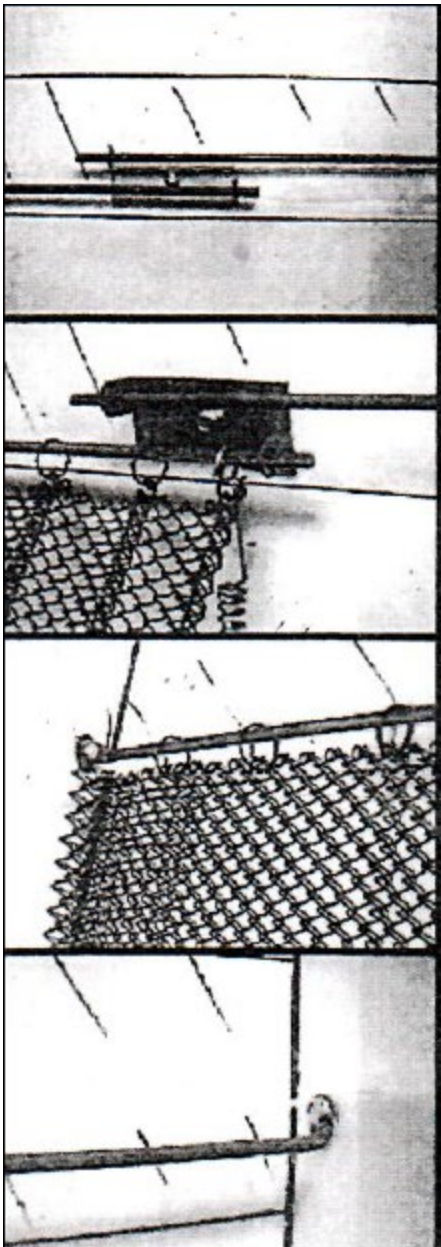

Note: Since every fireplace is constructed differently these instructions should be used as a guide only.

- The sheet metal center bracket is mounted like the picture on the lintel bar in the middle of the fireplace, towards the front where the screens are going to hang.
- The extra smaller bracket is for the special application where the main bracket cannot mount to the ceiling of the lintel bar.
- The rods have to be cut to length opposite to the eyelet.
- Take the opening of the fireplace, divide by half, and add 2.5" (Example: Opening is 38". Divide by 2 = 19" plus 2.5" making each rod 21.5" long)
- Depending on the fireplace, the side of the eyelet may have to be bent 90 degrees to be attached to the side wall of the fireplace.
- After the main bracket is installed, insert the rods into the main bracket. Go across horizontally and mark the screw hole for drilling the hole in the side of the fireplace wall.
- Drill the holes with appropriate drill (masonry drill)
- When ready to install the screen, simply insert the rods through the rings on the panel(s).
- Make sure the pulls are towards the middle of the fireplace.
- To keep the screen attached to the side wall use the last ring and secure between the rod and wall.