

Stone Placement Instructions

Model: STONEKIT

For use with the following models: AVFL42N(P)IF-RB, AVFL42N(P)IF-BU, AVFL48N(P)IF, AVFLST48N(P)IF, AVFL60N(P)IF, AVFL72N(P)IF, ODLANAIG-48, ODLANAIG-60, ODLANAIG-72, ODLANAIGST-48 AND ODLANAIGST-60

WARNING: Turn off appliance and allow to cool completely before beginning installation. **DO NOT** use this optional kit with any other internal hearth option such as logs.

Kit Contents:

- Eighteen (18) ceramic fiber stones

NOTE — Do not handle stones with your bare hands. **Always wear gloves to prevent skin irritation from stone material.** After handling the stones, wash your hands with soap and water to remove any traces of fibers.

NOTE: Prior to placing the stones you must first install the deflection glass and crushed glass media. For proper air deflection glass and crushed glass media placement please refer to the Owner's and Installation Manuals for the particular AVFL or LANAI appliance that this kit is being used for.

1. Begin by placing stones randomly on the hearth area outside of the burner. No stone should be placed on or in front of the pilot area.
2. Light the appliance and look for any contact between flame and stones. If contact is made, move the stones from the flame area. See Figure 1, 2 or 3.

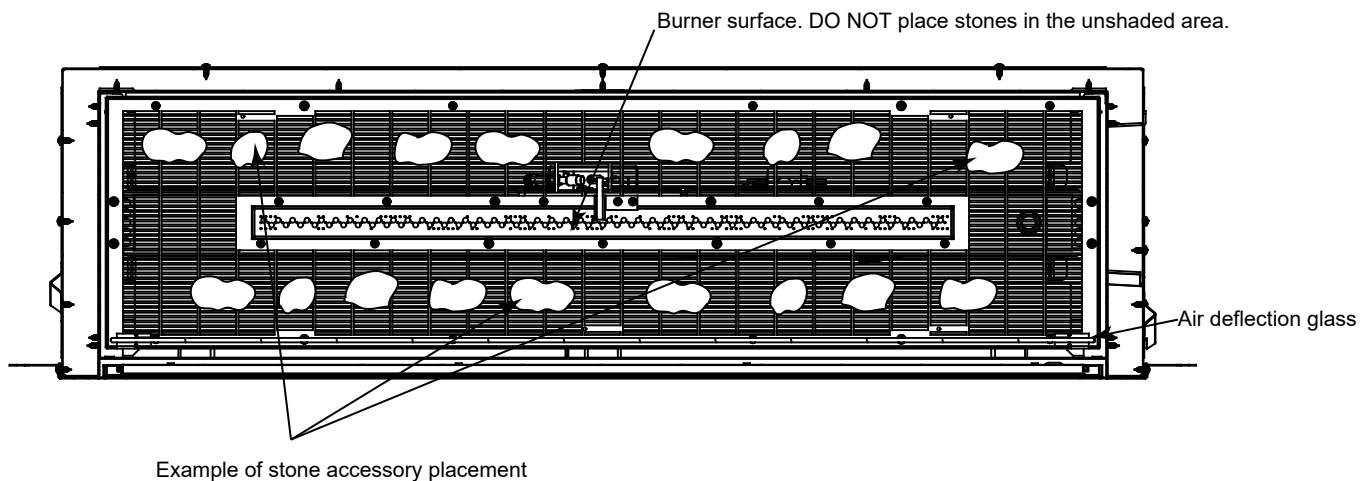


Figure 1 – Stone Placement for AVFL42N(P)IF-BU and AVFL42N(P)IF-RB

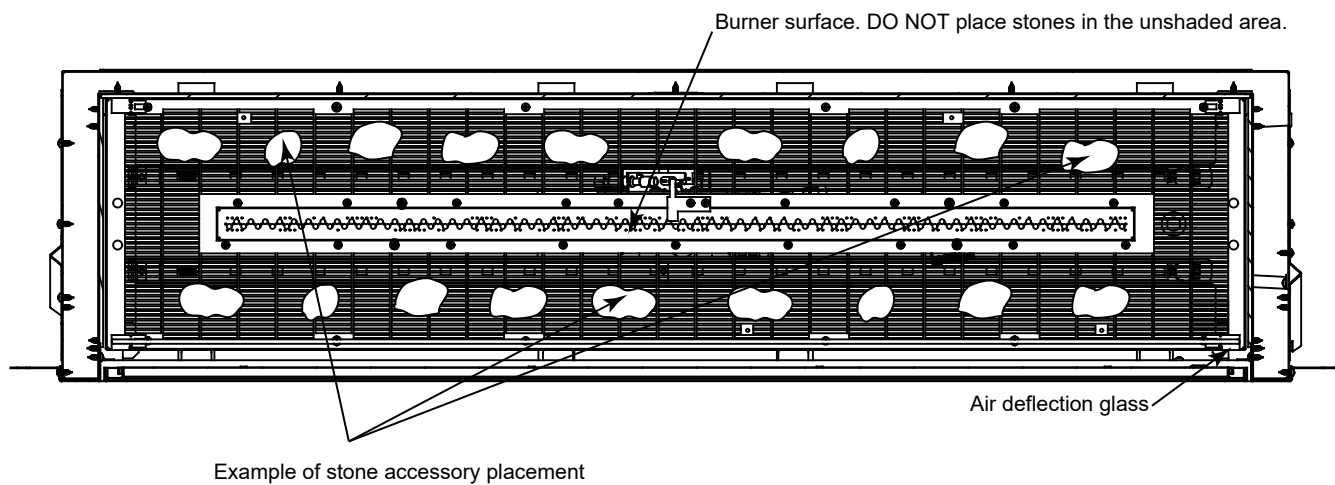


Figure 2 – Stone Placement for AVFL48N(P)IF, AVFLST48N(P)IF, ODLANAIG-48 and ODLANAIGST-48

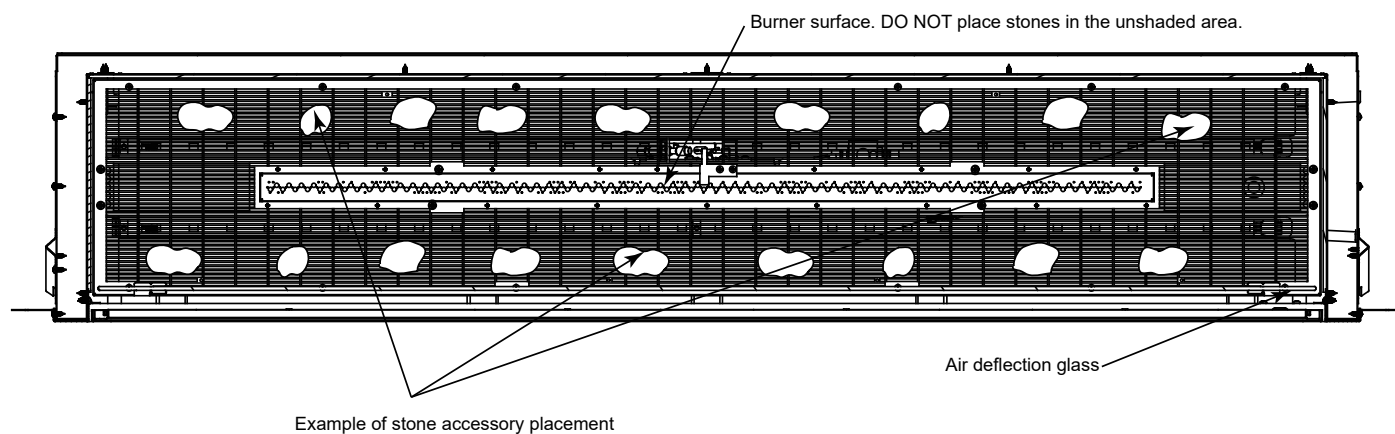


Figure 3 – Stone Placement for AVFL60N(P)IF, AVFL72N(P)IF, ODLANAIG-60, ODLANAIG-72 and ODLANAIGST-60

Hearth & Home Technologies
 7571 215th Street West, Lakeville, MN 55044
www.hearthnhome.com