PEARL MANTELS CORPORATION INSTALLATION FOR 900 CEDAR SHELF

Wood is considered a combustible material. Heat clearances must be adhered to. Before installing, check your local building codes and the manufacturer's instructions for clearance for your specific fireplace insert or stove.

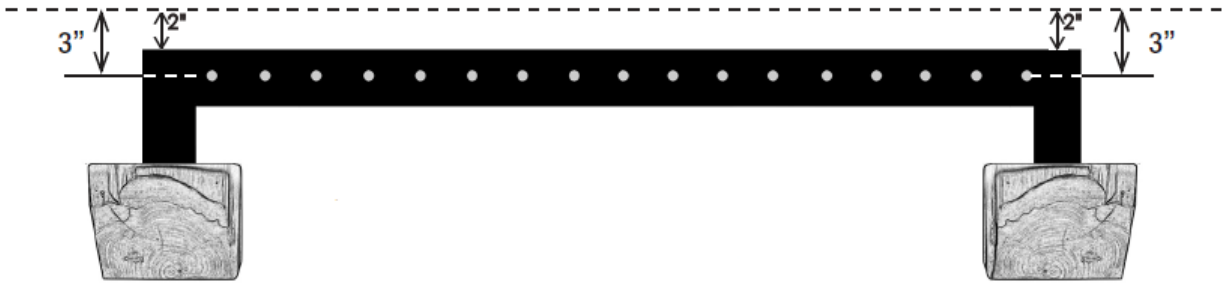

Attach the corbels to the bracket using the screws included in your hardware pack. The holes are pre-drilled on the corbels. The bracket and corbels are color coded. Mount like colors together. For example if the corbel has a red sticker mount it to the side of the bracket that also has a red sticker.

Determine your finished height and make a light mark on your mounting surface where you want the height of the top of the shelf to be. Measure 2 inches down from that mark. This is where the top of your bracket should be. Always consult a professional for advice on the proper hardware and installation for a safe and secure mount (i.e. finding studs to mount to). The type of hardware (not included) you will use for mounting the bracket will depend upon the medium your shelf will be attached to (i.e. brick, stone, drywall).
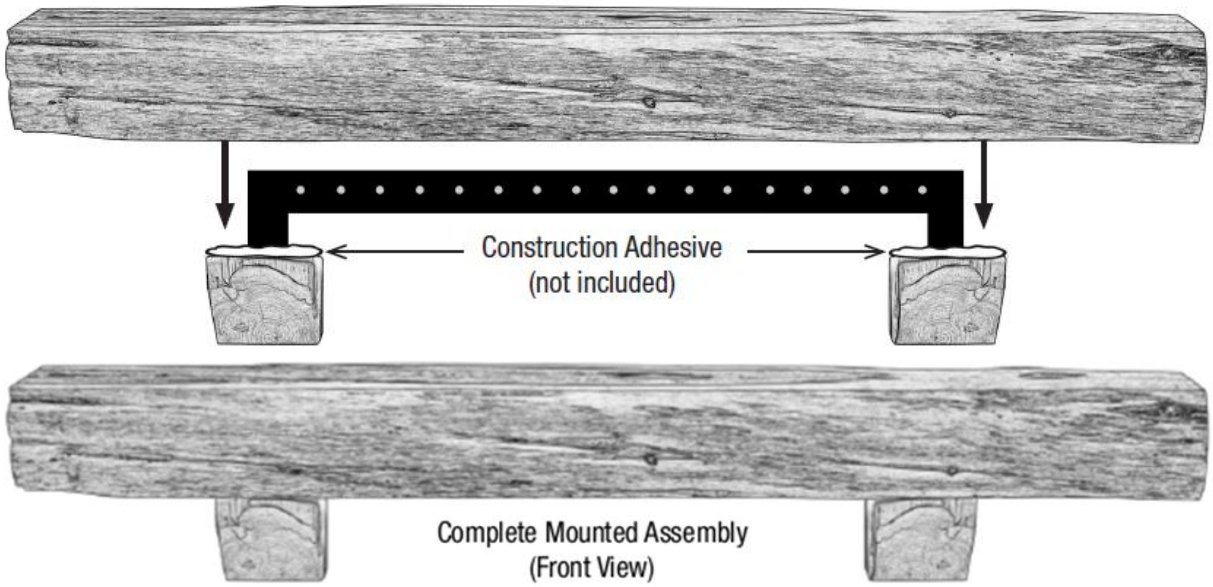
After mounting the corbels and bracket to your surface, affix the cedar shelf to the top of the corbels using construction adhesive (not included).