

FOR USE ON DVCP34BN91 FIREPLACE INSERTS

INSTRUCTIONS MUST BE LEFT WITH THE OWNER FOR FUTURE REFERENCE.

DVCP34BN91 SURROUNDS (BLACK)			
Size	Model Number	Size	Model Number
42 x 29 x 1	DS34401BL	40 x 29 x Flush	DS34400BL
44 x 31 x 1	DS34441BL	44 x 31 x Flush	DS34440BL

NOTICE: Installation and repair must be done by a qualified service person.

ATTENTION: Do not handle the surround with your bare hands. Wear gloves to prevent injury from sharp edges.

PREPARATION

1. Unpack the components and check for damaged or missing parts.

INSTALLATION

1. Install fireplace insert prior to installing the Surround. Remove barrier screen and glass door. Refer to the instructions provided with the fireplace insert.
2. Remove the knockout at the lower right corner of the surround to route the power cord if desired. **NOTICE:** Flush surrounds do not have knockouts for the power cord.
3. Slide the side flanges of the surround to the inside of the mating flanges of the insert.
4. Align the mating hooks and install. **See Figure 1.**
5. Replace the Glass Door Assembly.
6. Install the Barrier screen assembly.

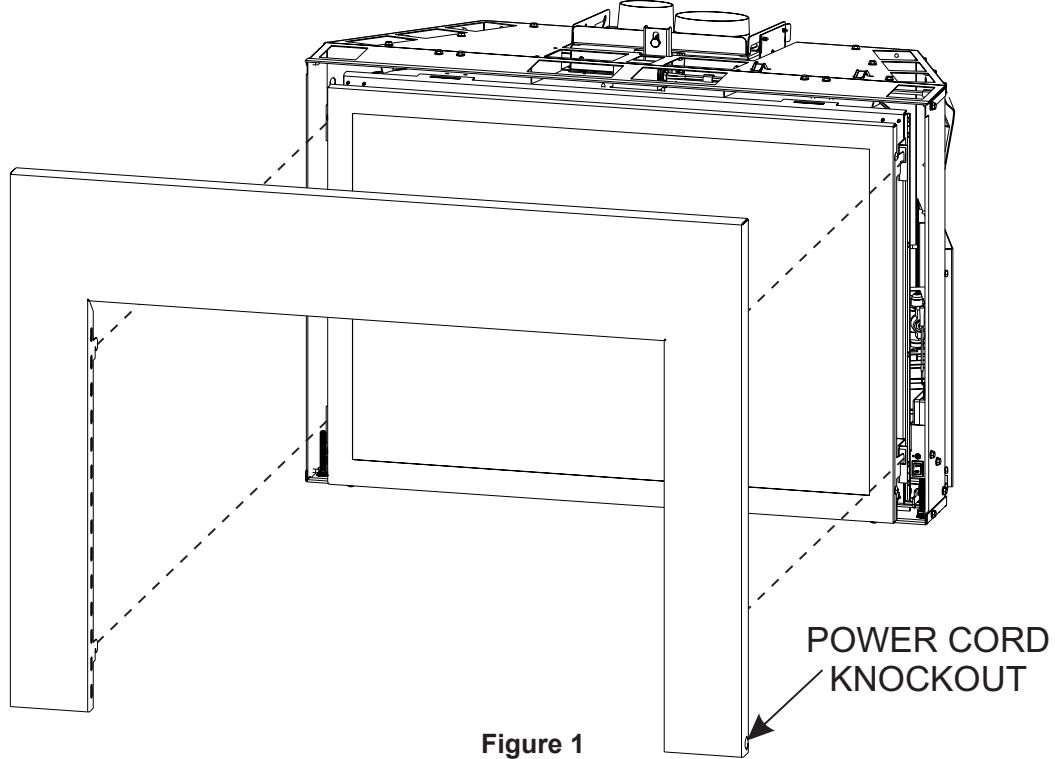


Figure 1

NOTICE: Contact your dealer for installation, service, repair, or warranty claim

Empire Comfort Systems does not sell, service, or provide warranty directly to consumers. The consumer must contact the dealer where the product was purchased for a warranty claim. If a non-qualified installer or consumer installs or services this product, the product warranty is voided. Most dealers will only service products they sold so it is important for the consumer to choose a qualified dealer for installation and warranty service. In order to maintain the warranty, service must be performed annually and documentation reviewed during the warranty request.



SINCE 1932

www.empirecomfort.com

**Empire Comfort Systems Inc.
Belleville, IL**

If you have a general question
about our products, please e-mail
us at info@empirecomfort.com.

If you have a service or repair
question, please contact your dealer.